



MOE[®] ENHANCED TRIGGER GUARD

MOE



 
INSTALLATION INSTRUCTIONS

092-0068-A


- ⚠ WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.**
- ⚠ CAUTION: PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING. COMPONENTS UNDER SPRING PRESSURE MAY EJECT FORCEFULLY AND COULD CAUSE INJURY.**
- ⚠ WARNING: OBSERVE SAFE FIREARM HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS BODILY INJURY OR DEATH. MAGPUL INDUSTRIES SHALL NOT BE RESPONSIBLE FOR INJURY, DEATH OR PROPERTY DAMAGE RESULTING FROM FAULTY INSTALLATION, MISUSE, ILLEGAL USE, OR MODIFICATION OF THIS PRODUCT.**

This document contains technology subject to the Export Administration Regulations (15 C.F.R. Parts 730-774). A prior authorization or license from the U.S. Department of Commerce, Bureau of Industry and Security (BIS) is required prior to the export, re-export, release, or transfer of this document to a non-U.S. person whether in the United States or abroad.

INCLUDED PARTS:




MAGPUL.COM/INSTRUCTIONS • 1.877.4MAGPUL

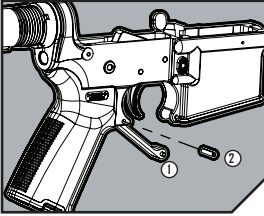

STEP 1: REMOVE EXISTING TRIGGER GUARD

Take care to avoid damage to the receiver.


Using a $1/8$ " punch, depress the front detent spring (1) and rotate the trigger guard down, clear of the receiver. Using the same punch, drive out the rear roll pin (2) and completely remove the trigger guard.

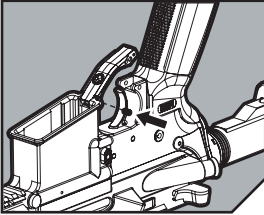

STEP 2: INSTALL MOE TRIGGER GUARD

Insert the front end of the Trigger Guard into the receiver until the hole aligns. Using a $1/16$ " hex key, hand tighten the front set screw until it is flush with the receiver tab.


Take care not to over tighten the set screw, as it can result in damage to the Trigger Guard.

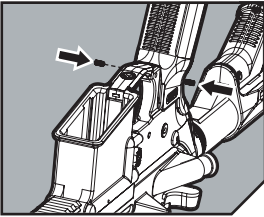

STEP 3: INSTALL HARDWARE

Lightly tap the rear end of the Trigger Guard into the receiver until the holes align. Using a $1/16$ " hex key, hand tighten the rear set screws until they are flush with the receiver tab.

Take care not to over tighten the set screw, as it can result in damage to the Trigger Guard.

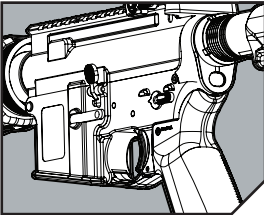

STEP 4: VERIFY INSTALLATION

Perform final inspection including function check per *US Army TM 9-1005-319-23&P Unit and Direct Support Maintenance Manual (3-97)* to verify correct installation.

Always test fire your weapon before using it in an operational environment.